



# RMAX Station installation instructions



## 1. How to set it up

The RMAX kit can be mounted to the wall (screws & plugs supplied) or on a cart used horizontally or placed on a shelf.



Quick Coupling Kit KCR optional.

- Use the adapter to connect the hose to the faucet.
- Close the water supply from the faucet and remove the plug.
- Set the flow rate to 80 liters/hour maximum.
- The inlet and outlet fittings can be interchangeable to select the direction of water flow using the provided wrench set.

## 2. Changing the column

The station's saturation level is visible: the resin changes from BLUE to OCHRE.

- When the column has completely changed color, unclip it from the mounting brackets and connections.
- Replace it with a new column by clipping it onto the mounting lanyards and then replace the connections (press the black end onto the column's white tip).



## 3. Storage

We recommend keeping the column wet at all times. It can be stored for two years in its original packaging at room temperature.

**When not in use, close the water supply from the faucet to avoid overpressure.**